





Contents Overview

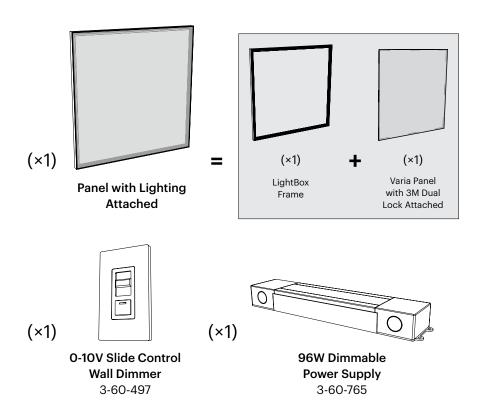

Overview

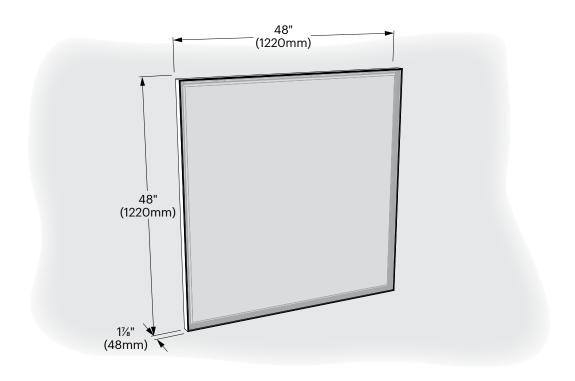

Installation

Required Tools






Installation

1 Preparation


a Remove 3form Panel from back mounting panel.

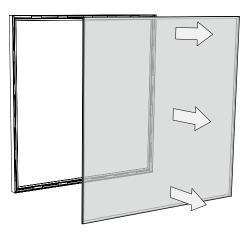

b Determine where light box will be mounted and verify proper fasteners based on substrate.

2 Attach Back Panel


Attach back panel to wall with enough fasteners to allow it to hold the weight of the feature.

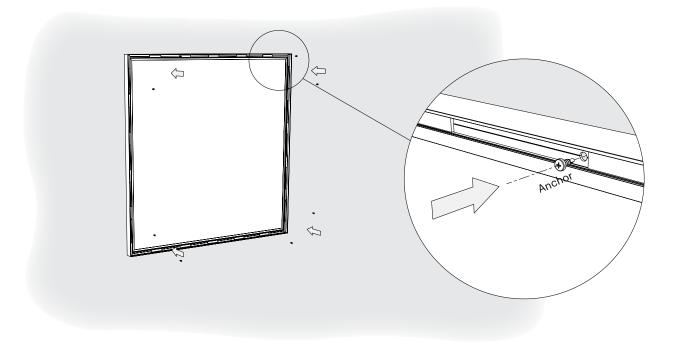

Installation

3 Connect Electrical


Once the back panel is mounted to the wall, have a qualified electrician wire the lights and verify that everything is working before the panel is installed.

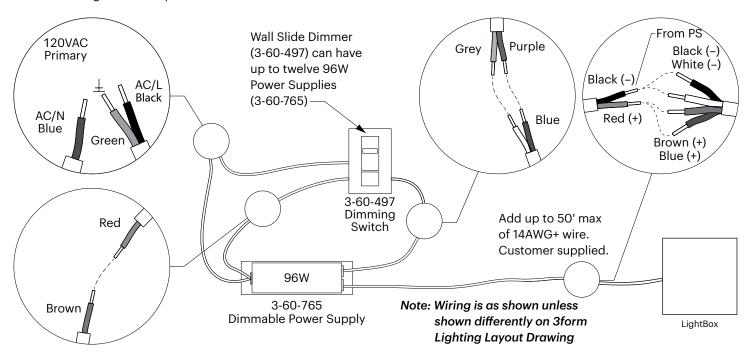

Installation

4 Reattach 3form Panel

a

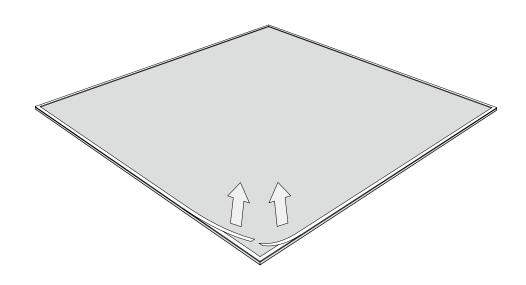

b

