








Ready To Go  
**SimpleSpec 200.25™**

**Installation Manual**

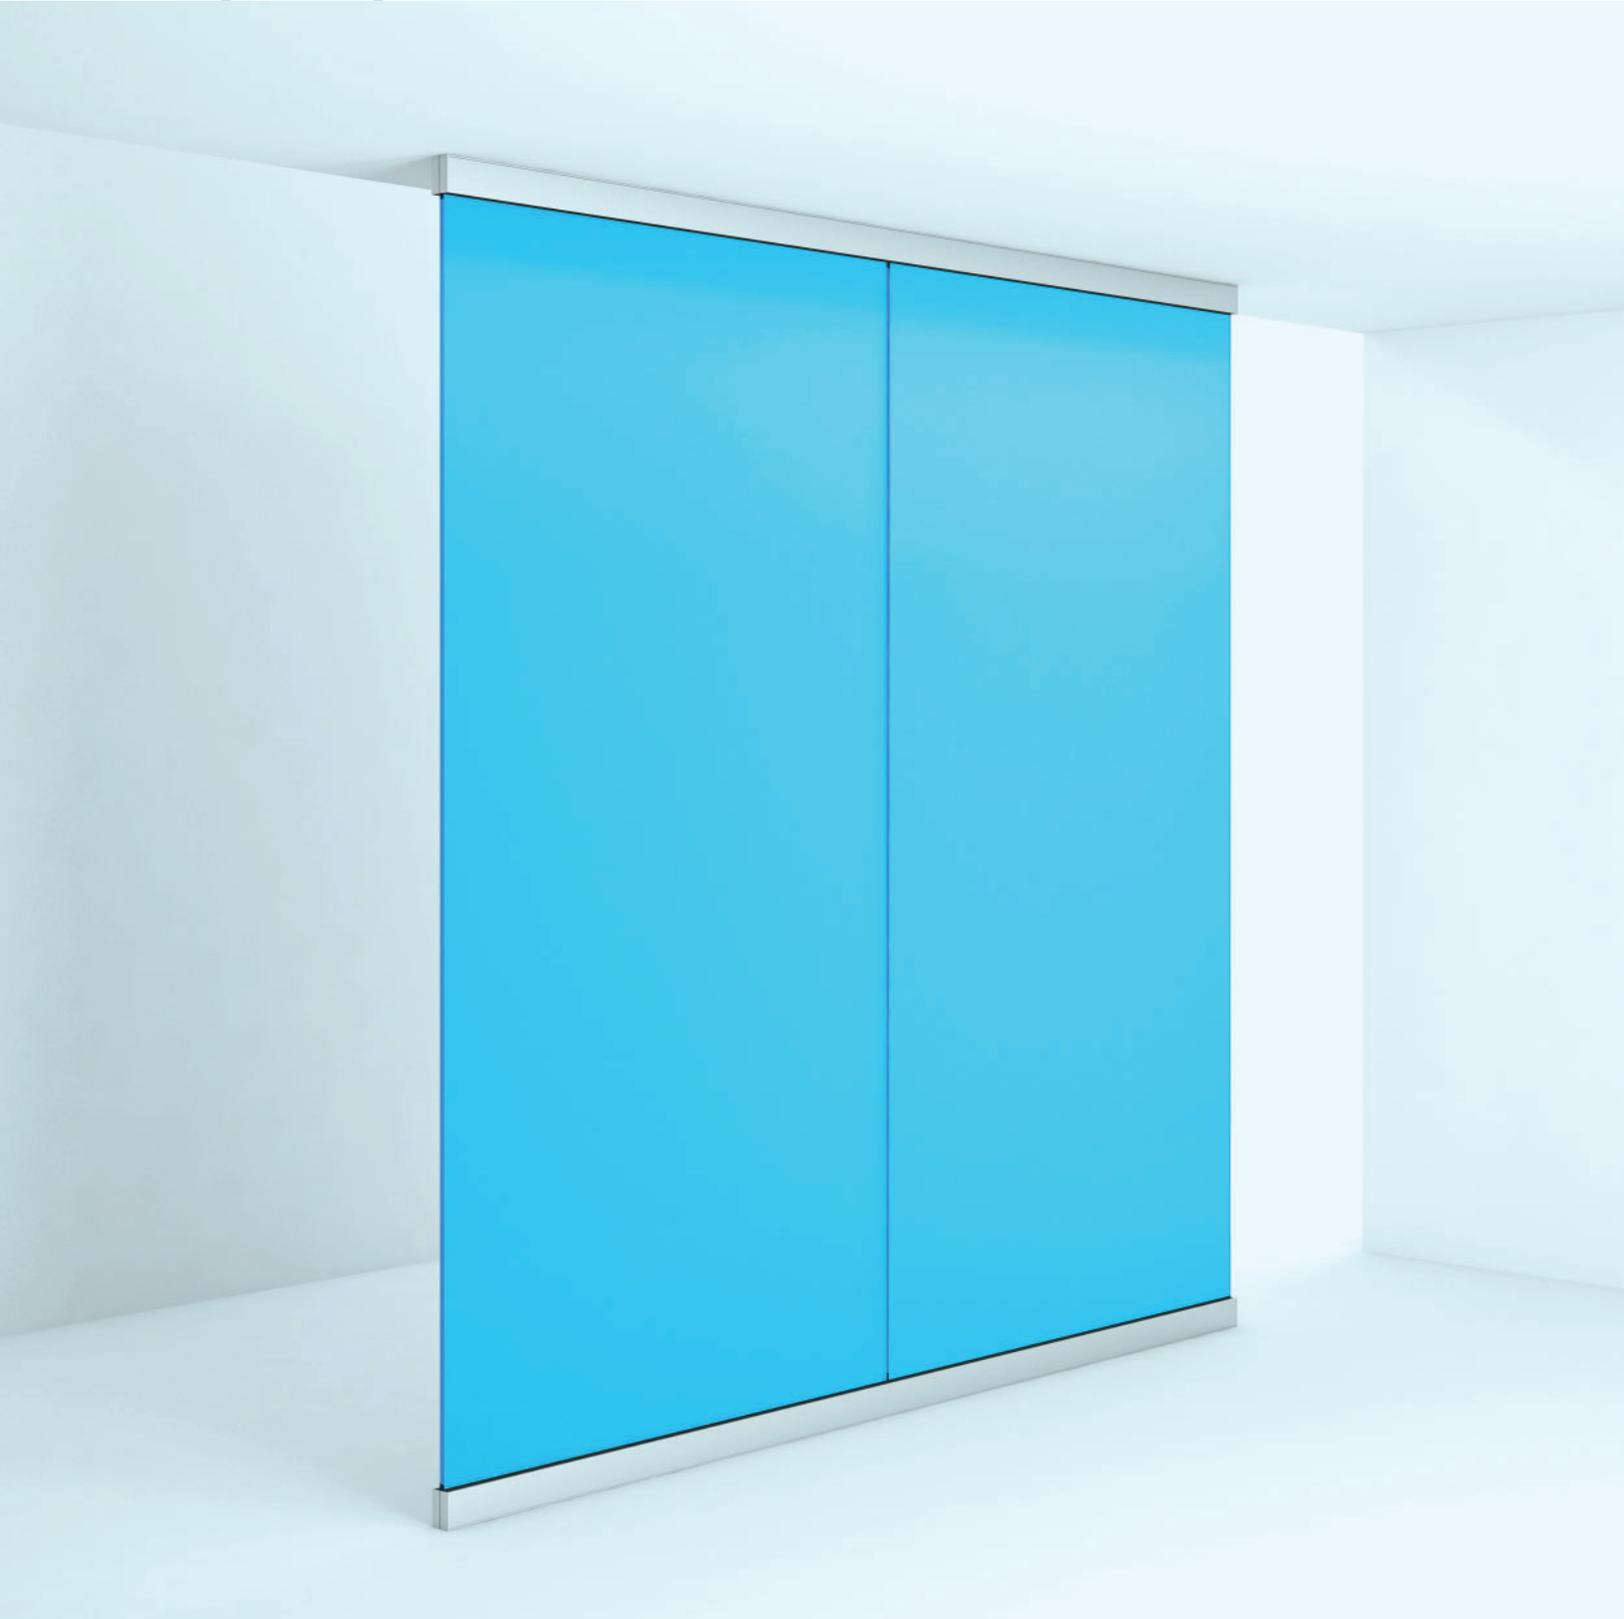


For more information, please visit [3-form.com](https://www.3-form.com) or call 800.726.0126  
OCTOBER 2020 | MAN-RTG-200-25 | REV 003 © 2021 3form, Inc. All rights reserved.

### Contents Overview

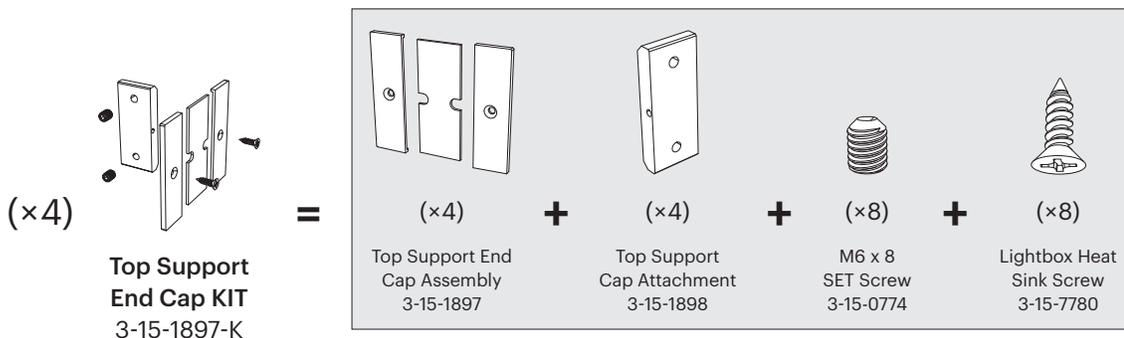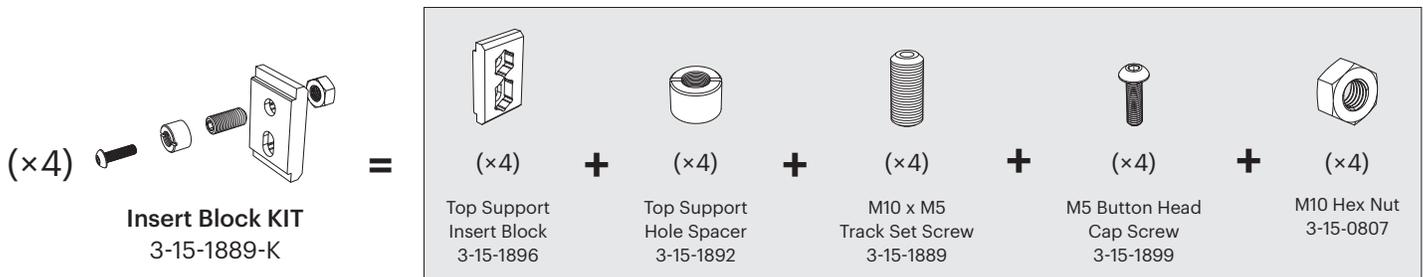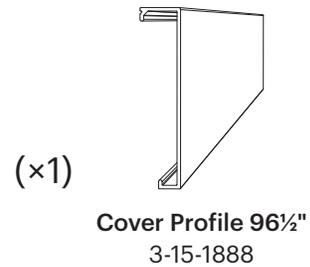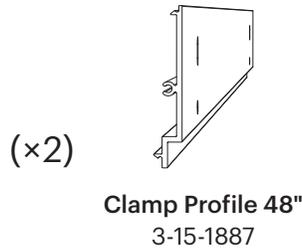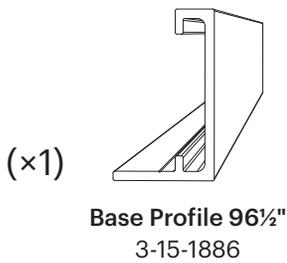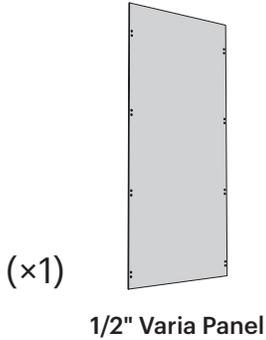


### Overview

200.25 is a minimalist hardware system made to work with ½" Varia. It is a floor and ceiling attached system meant to give a minimal hardware reveal. Using the insert block, 200.25 hangs Varia from the ceiling.

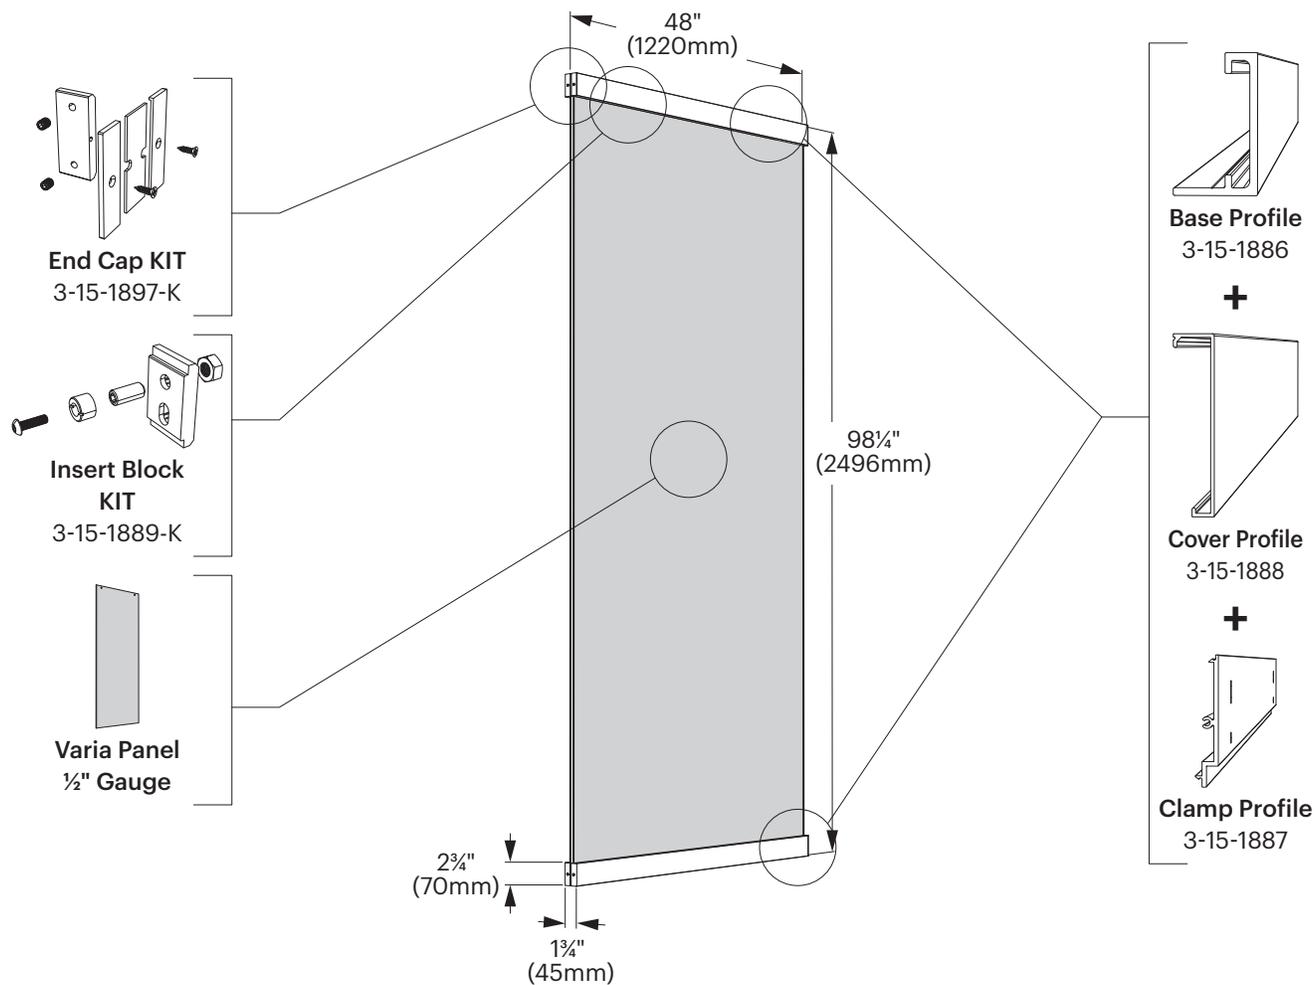


### Installation


#### Required Tools

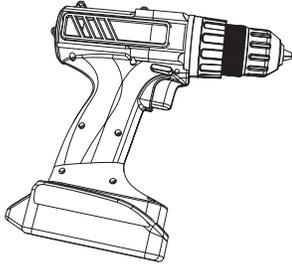

Drill

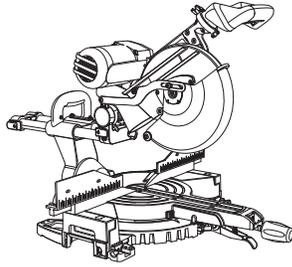


Chop Saw

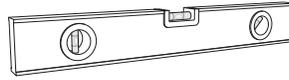

Level



Flat Head Screwdriver

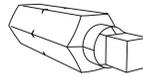


#3 Square Head Bit



1/4" Bit



Metric Allen Wrenches

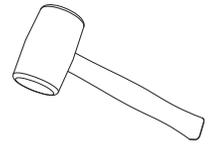


Rubber Mallet

## 1 Install Base Profiles into Floor and Ceiling

- a** For a single panel cut profiles (3-15-1886 and 3-15-1888) to approximately 1/4" more than the panel width ( 1/8" on each end). For multiple panels account for an additional 1/4" between panels, when using the two part clear seam "H" channel option. *\*3-15-1887 comes cut to size.*


- b** *\*For wall-to-wall installation insert blocks will need to be inserted prior to anchoring tracks (see Steps 2-3).*

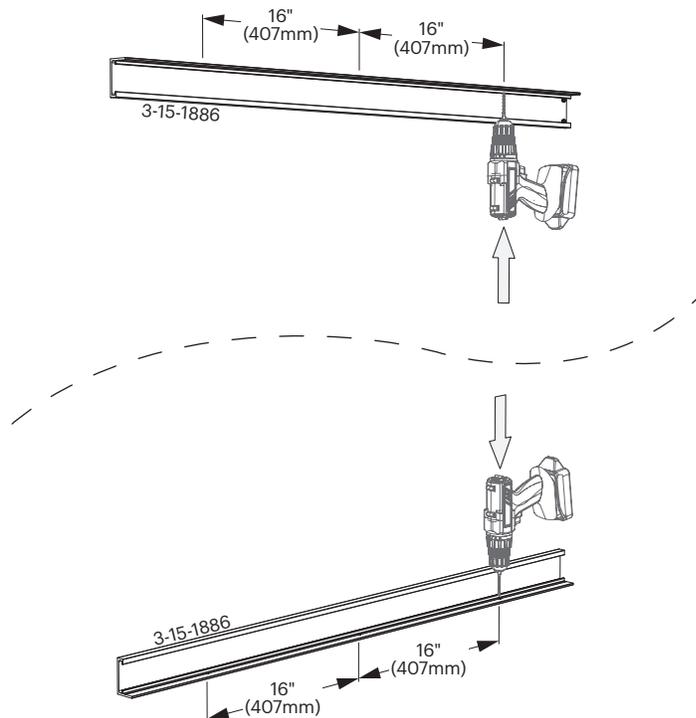

### Installation


#### 1 Install Base Profiles into Floor and Ceiling *cont...*

**c**

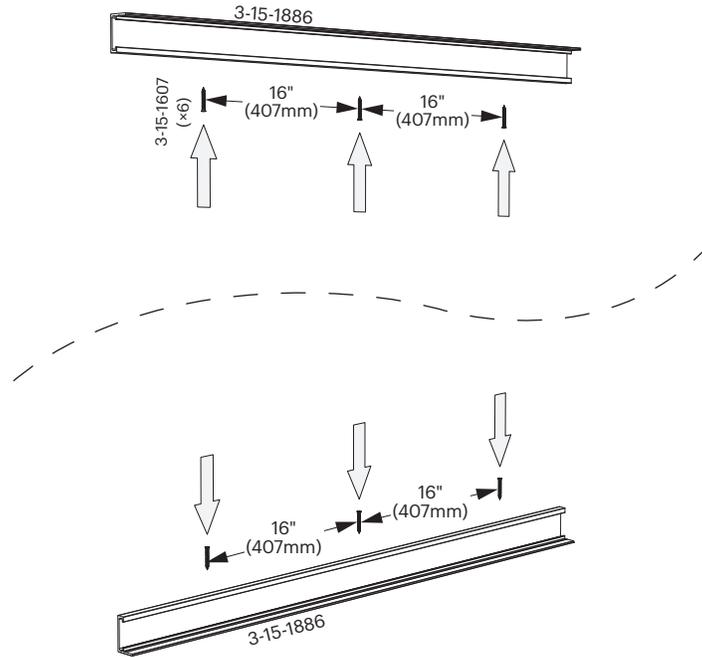


#### 2 Loosely Assemble Insert Blocks

**a** Top Insert Block

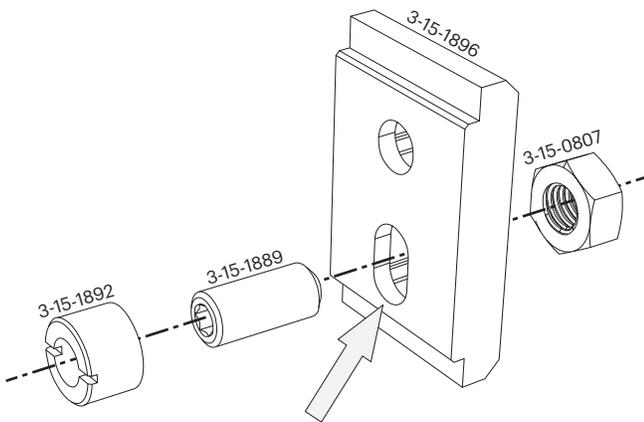


**b** Bottom Insert Block

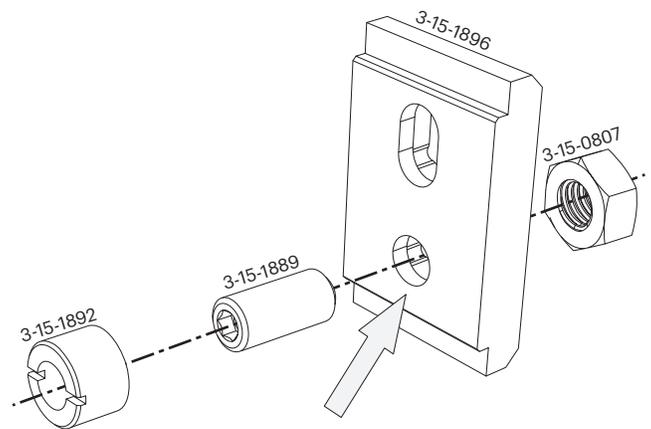

### Installation


#### 3 Slide Insert Blocks into Base Profiles

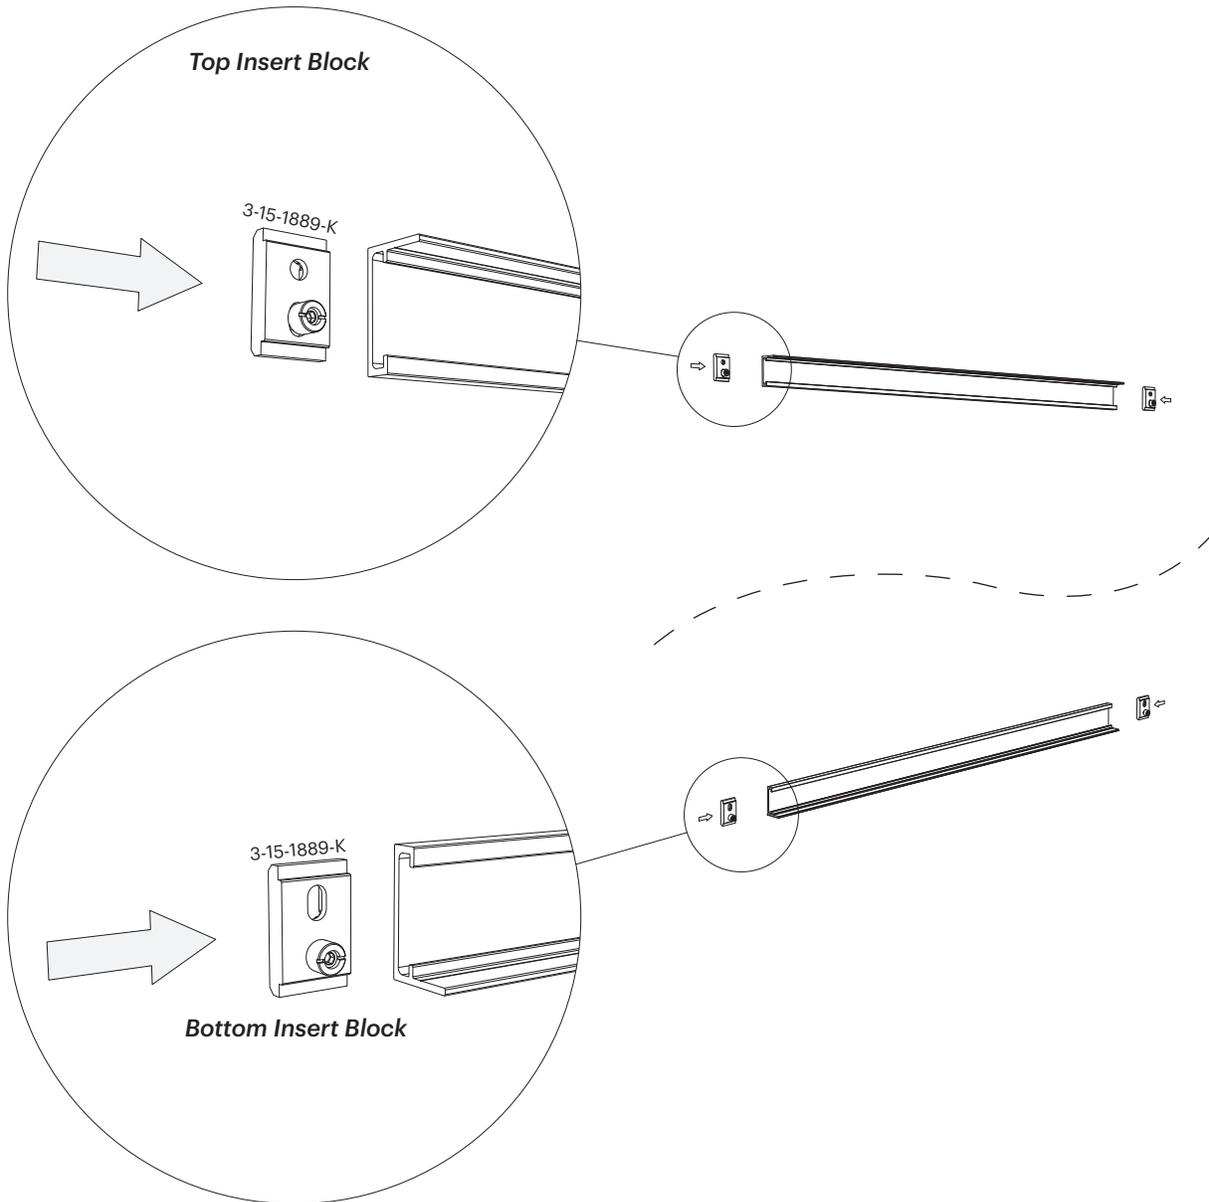

### Installation

#### 4 Install End Cap Blocks


*\*End Cap Blocks are not necessary for wall-to-wall installation.*

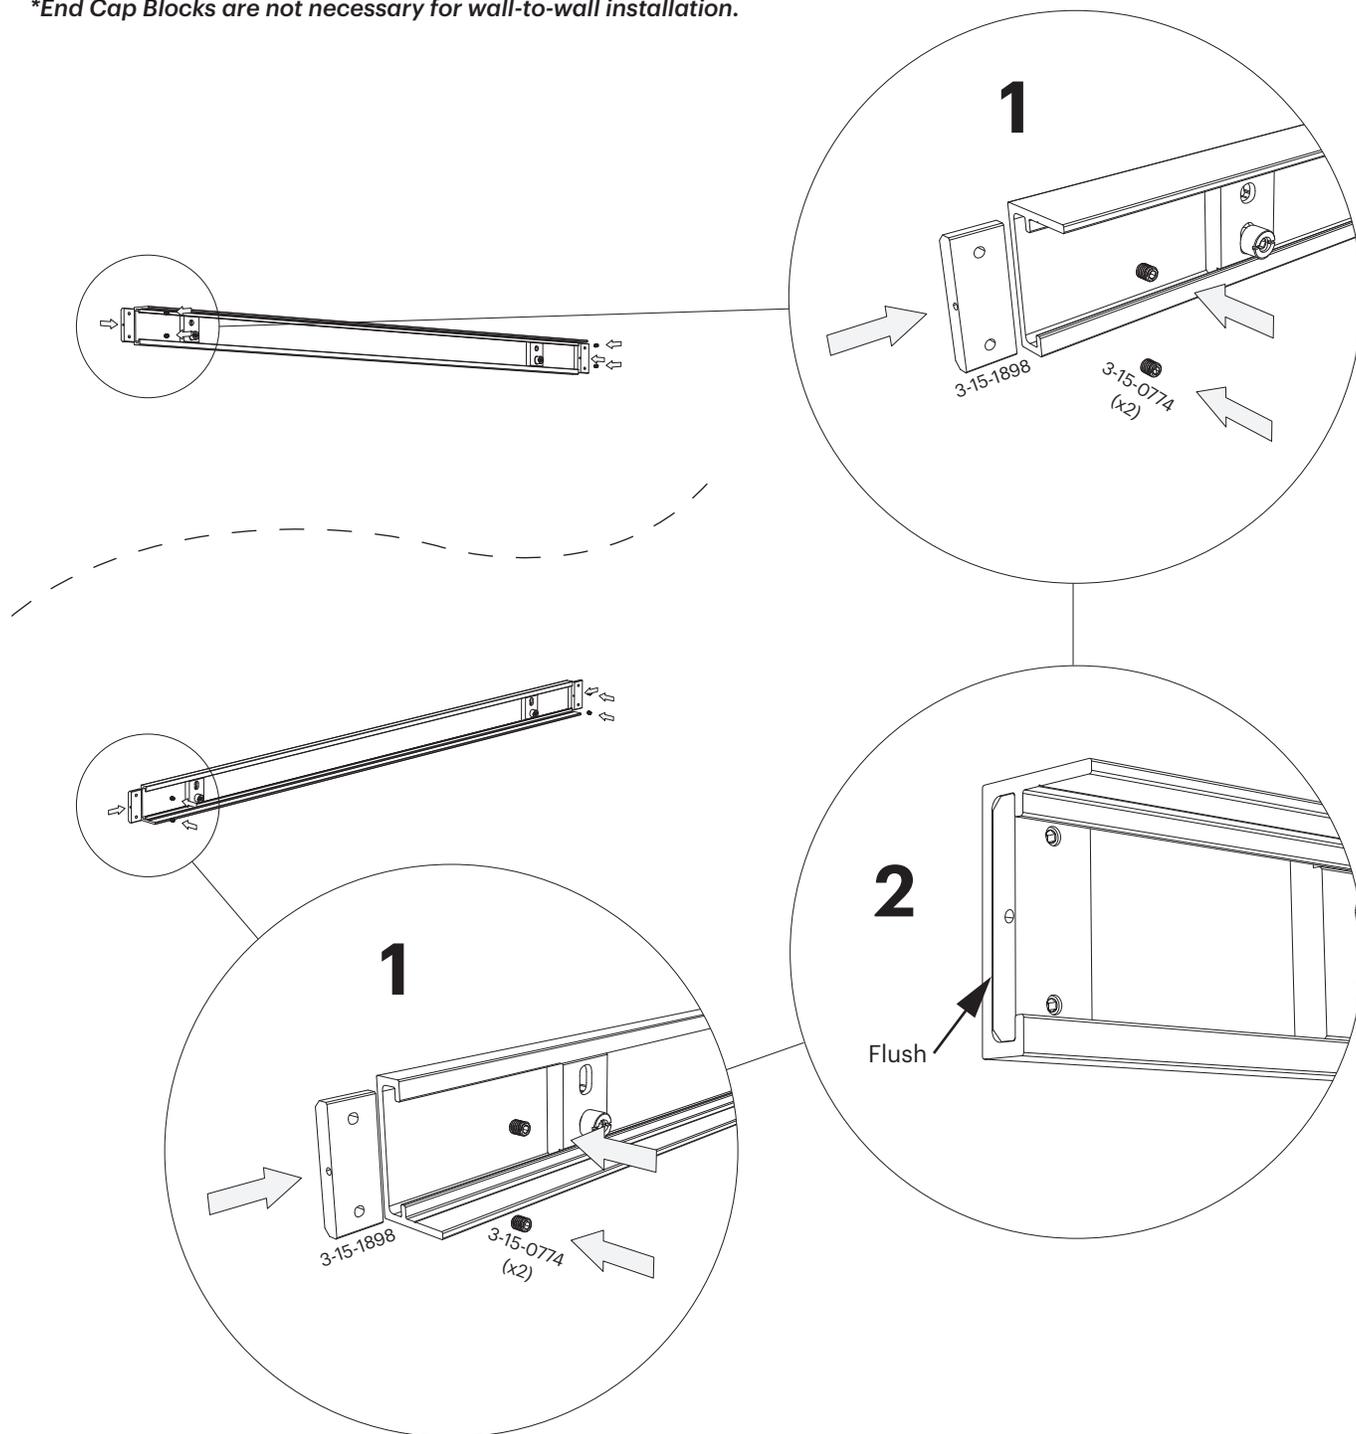

### Installation

#### 5 Hang Panel


a

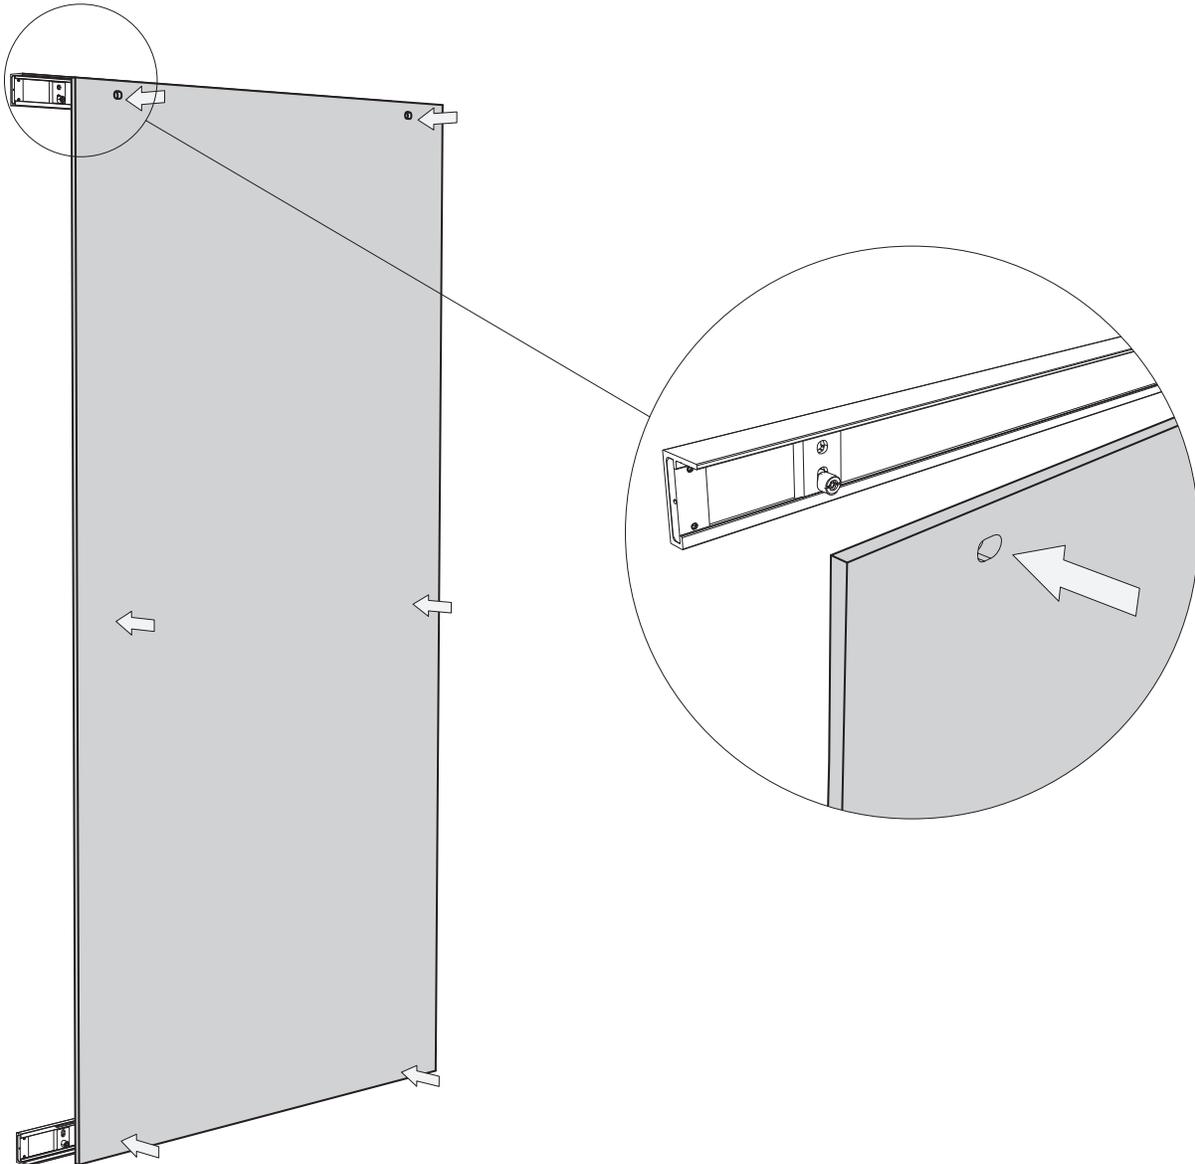

### Installation


#### 5 Hang Panel cont...

b

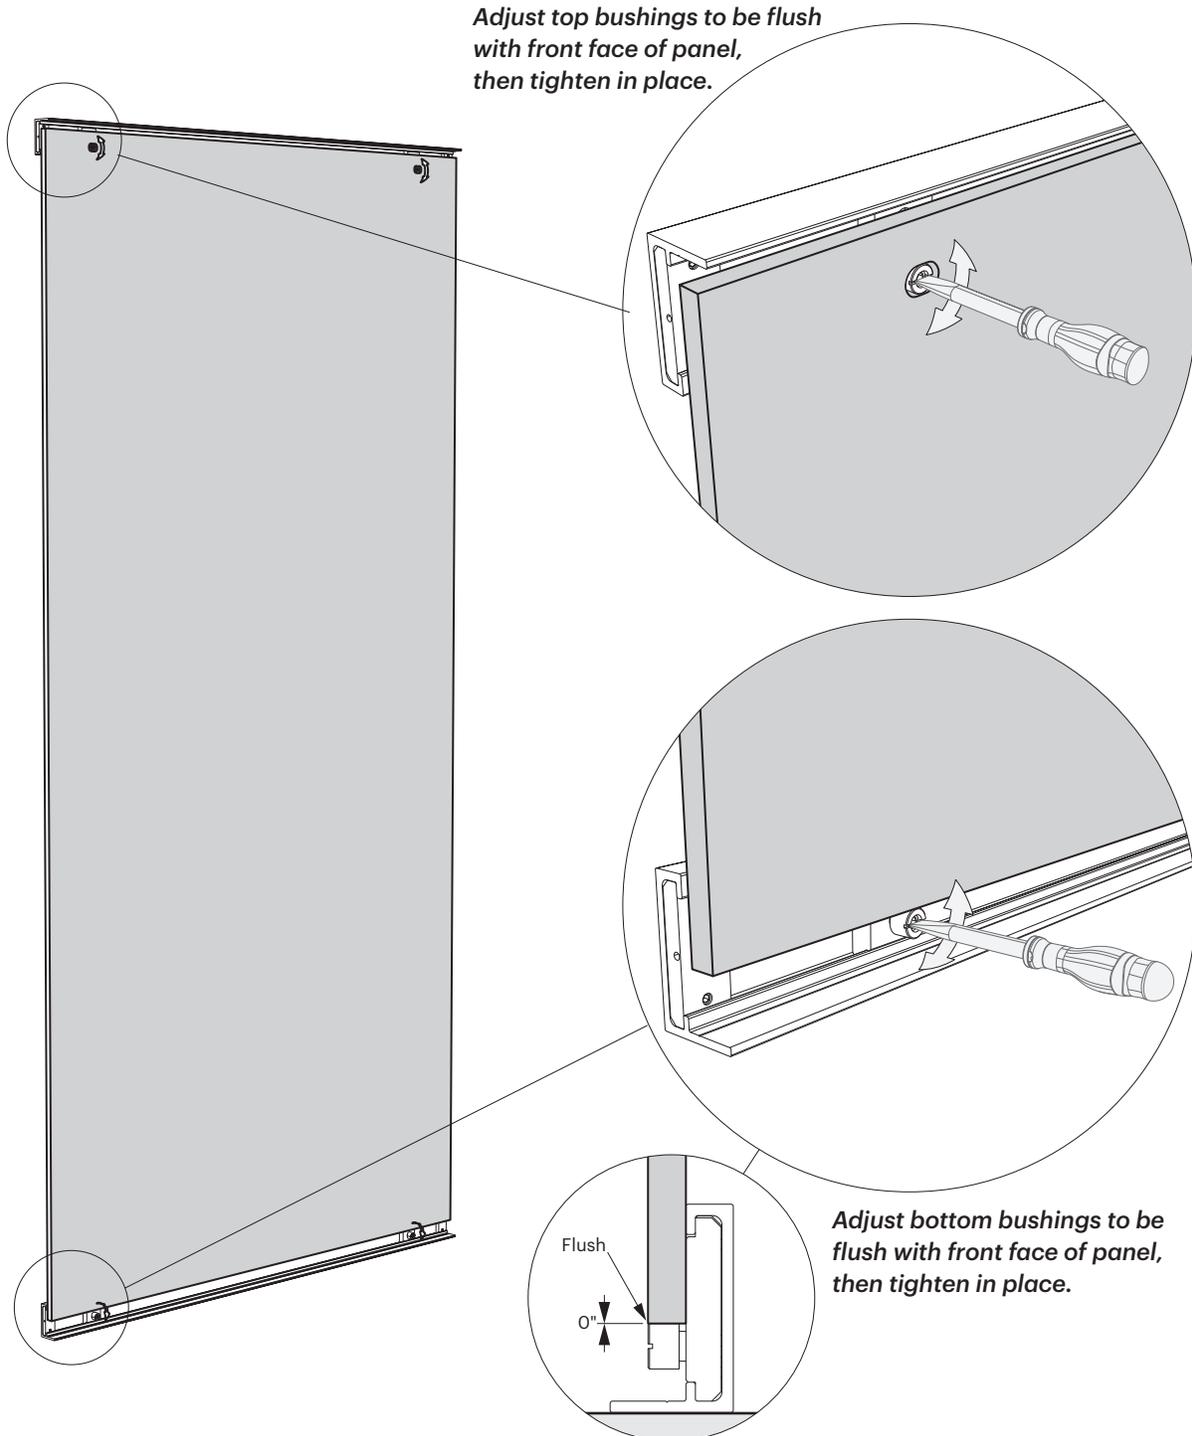


### Installation

#### 6 Attach Clamp Profiles

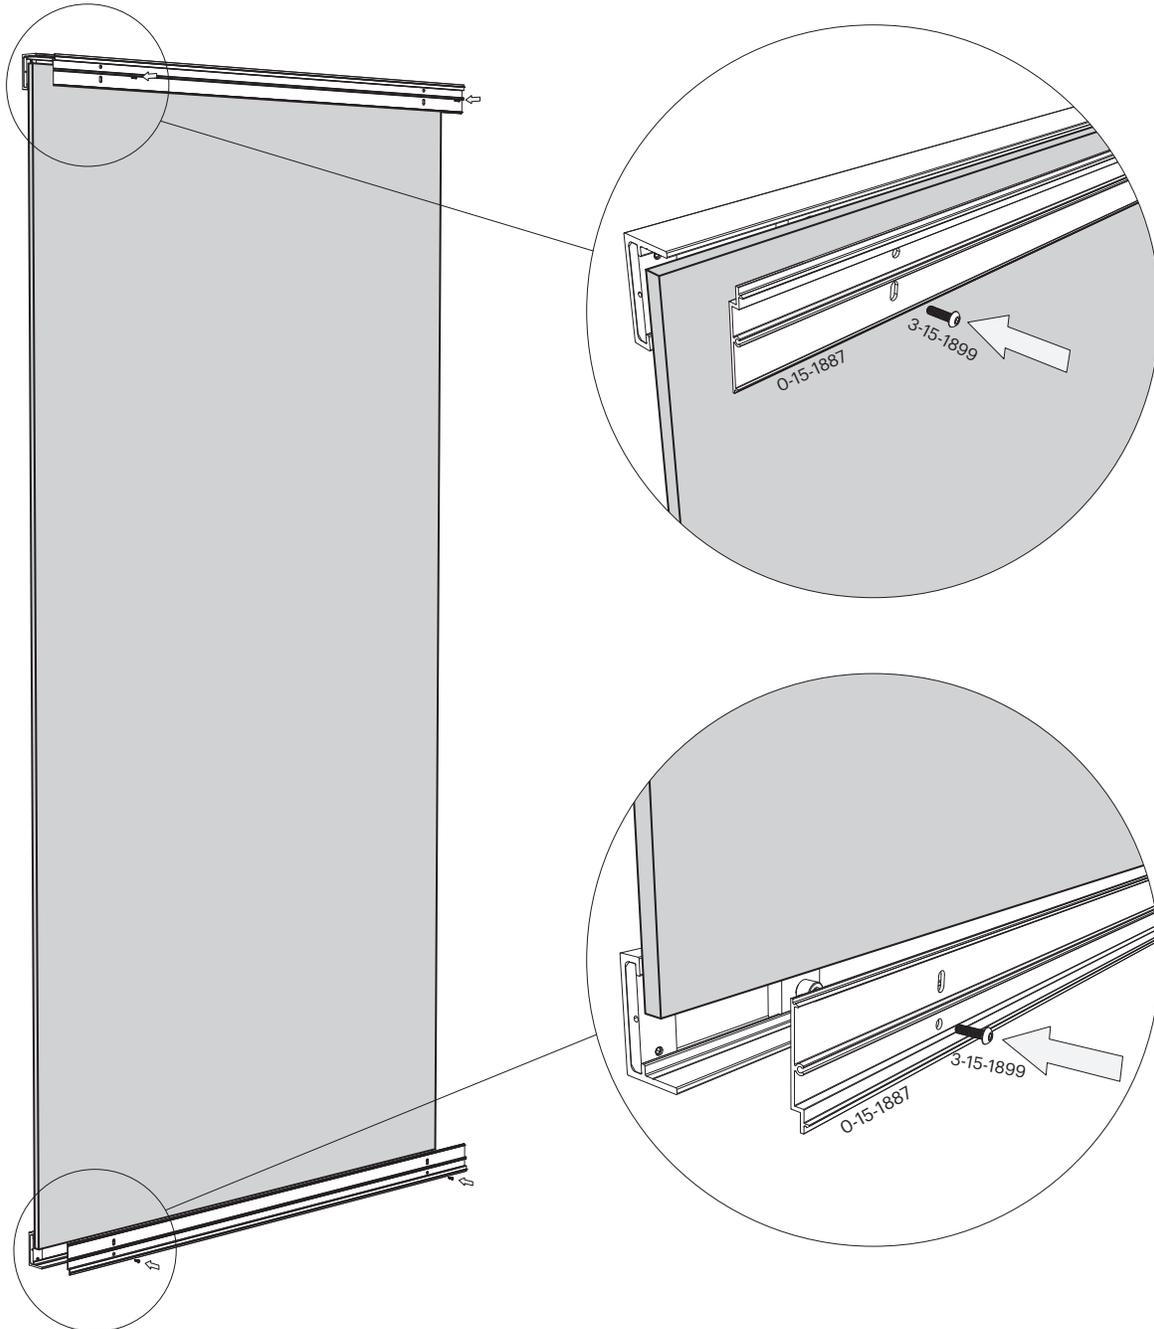

### Installation

#### 7 Attach Cover Profiles

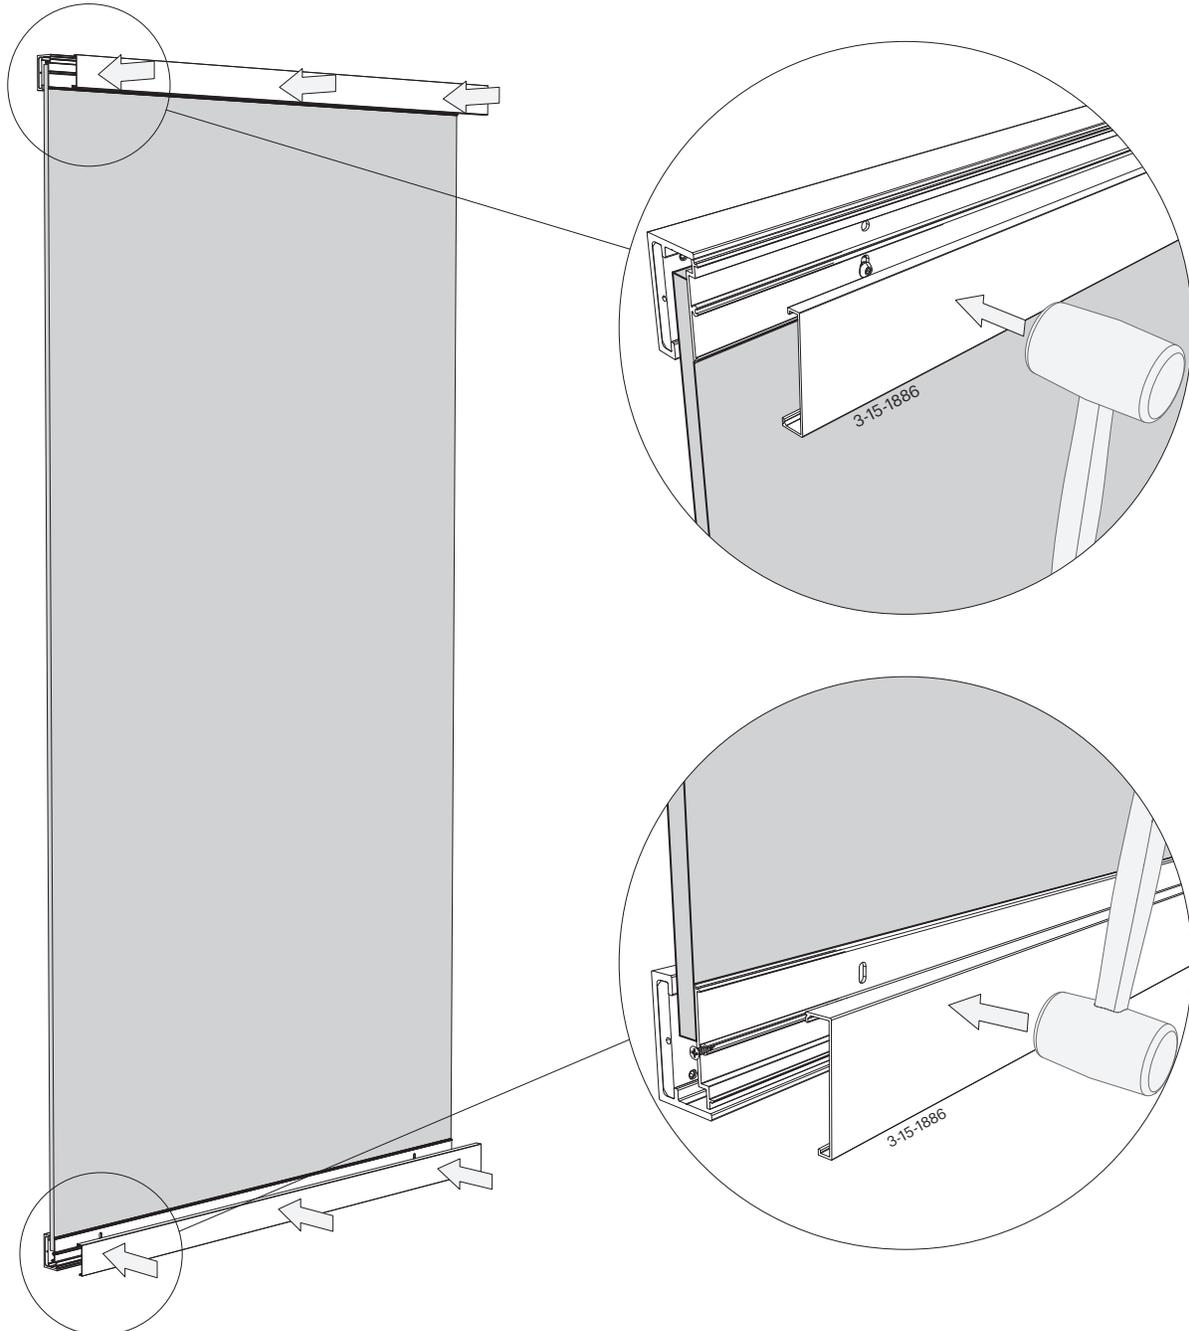

### Installation

#### 8 Attach End Caps

*\*End Caps are not necessary for wall-to-wall installation.*

