



Divide
SimpleSpec 200.108™

| **Installation
Manual**

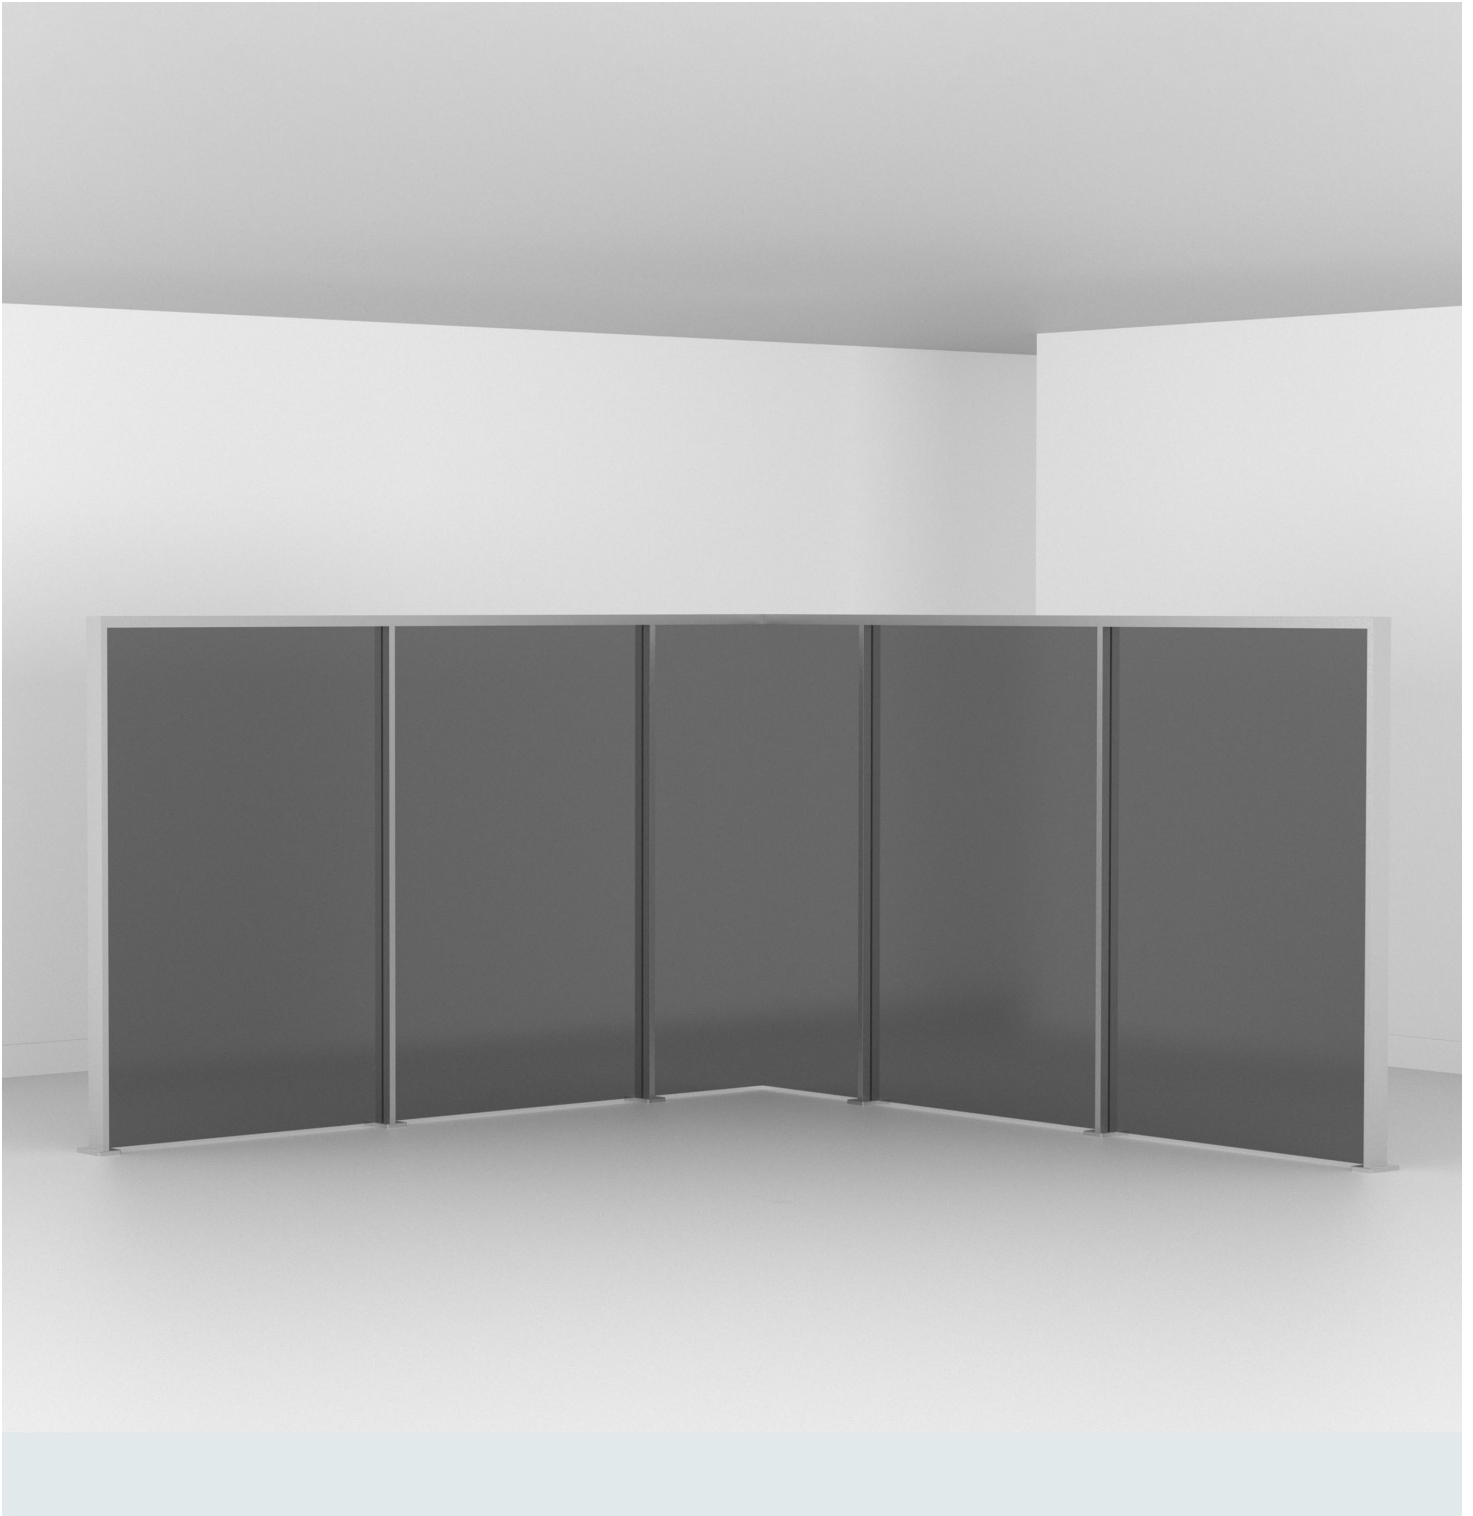


Contents Overview

(×4)




3/8" Varia
Panel

(×1)




3/8" Varia
Corner Panel

(×2)

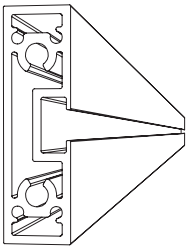


Vertical Post,
1 Glazing Channel
0-15-2183

(×4)

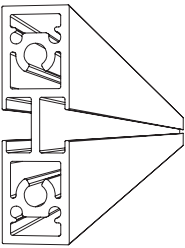


Vertical Post,
2 Glazing Channels
0-15-2181

(×2)




Cantilever
Top Rail, 96"
0-15-2103

(×2)

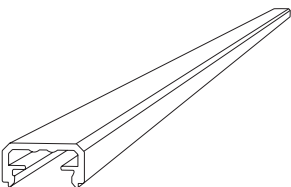


Low Profile Glazing
Channel, 96"
0-15-2369

(×10)

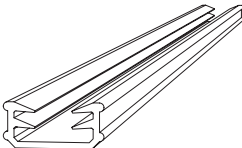


1/2" Glazing
Channel
3-15-2009

(×4)

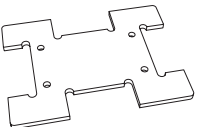


Installation Template
Baseplate Guide
3-15-2160

(×4)



Installation Template
Spacer Guide
3-15-2347

(×1)

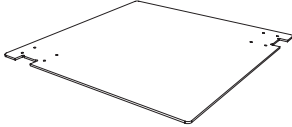


Installation Template
Corner Guide
3-15-2182

(×20)



Self-Tapping
Screw
3-15-2311


(×6)

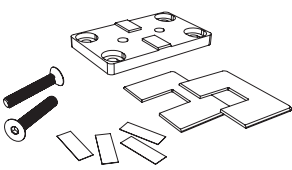

Baseplate KIT
3-15-2110-K

=


(×6)

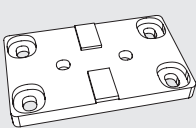

Baseplate
3-15-2110

+

(×12)

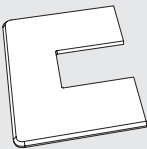

Baseplate Cover
3-15-2114

+

(×12)



Screw
3-15-2308

+


(×24)



VHB Tape Strip
3-15-2416


Contents Overview

(×2)

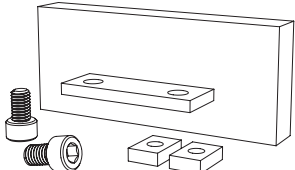

Top Rail End Cap KIT
3-15-2116-K


=



(×2)

Top Rail End Cap
3-15-2116

+



(×4)

Top Rail Low Profile
M6 T-Nut
3-15-2123


+



(×4)


Screw
3-15-2312

(×1)

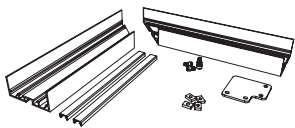

**Top Rail Mitered
Corner KIT**
3-15-2176-K


=



(×1)

Top Rail Mitered
Corner Bracket
3-15-2118

+



(×4)

Top Rail Low Profile
M6 T-Nut
3-15-2123


+



(×4)

Screw
3-15-2312


+



(×2)

Low Profile Glazing
Channel Miter Corner
3-15-2183

+



(×1)

Top Rail Miter B Length
3-15-2177

+



(×1)

Top Rail Miter A Length
3-15-2176

(×6)



**Baseplate Universal
Anchoring KIT**
3-15-2119-K

=



(×24)

M8x105 Concrete
Lag Screw
3-15-2309


+



(×24)

Hex Head Wood
Lag Screw
3-15-2310

Overview - Divide Partition 10'x10' Corner

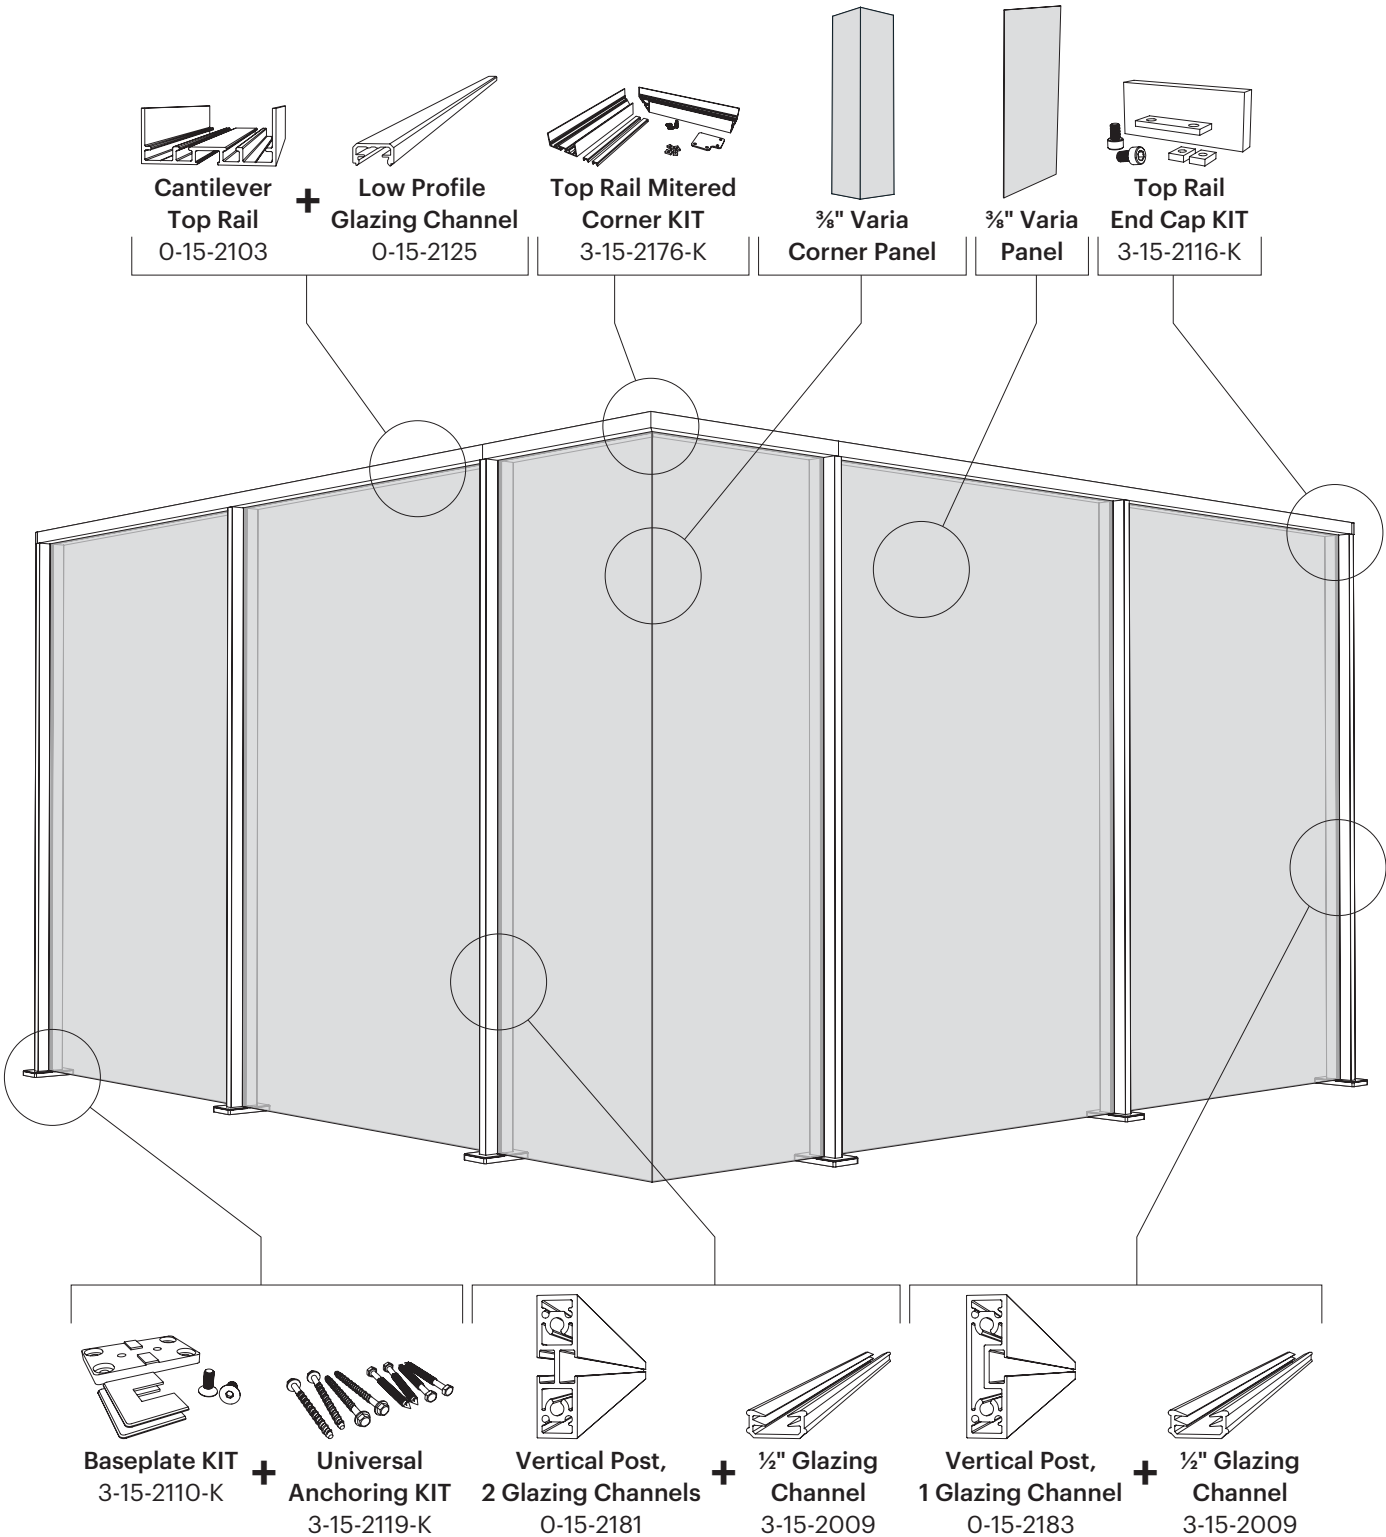


Overview - Accessory Options


Divide Partition Systems also accommodate a number of accessory options to customize the use for your application. Contact your 3form Elements Dealer for additional information.

Markerboard and Markerboard Shelf


Post to Post

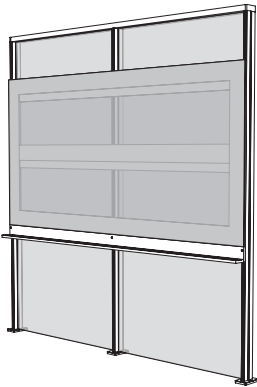


Inset on Hush Mount

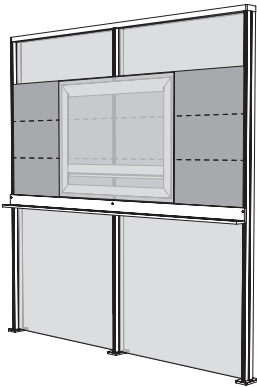


Accessory Shelf

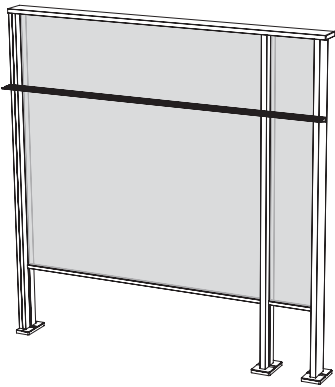

Hush Mount

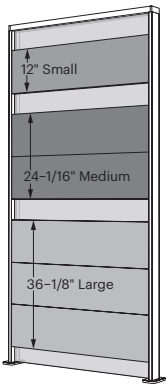


TV Mount

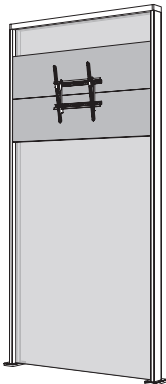


Coat Hook


Post Attachment




Hush Mount Attachment

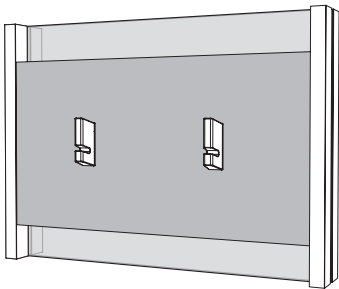

Hush Bar

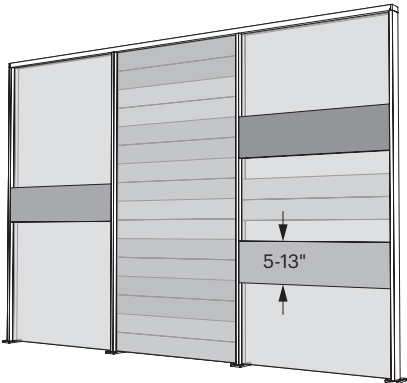


Shelves and Shelving Bracket

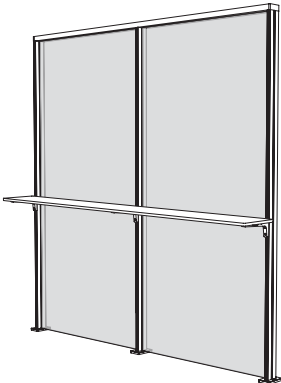


Installation

Required Tools

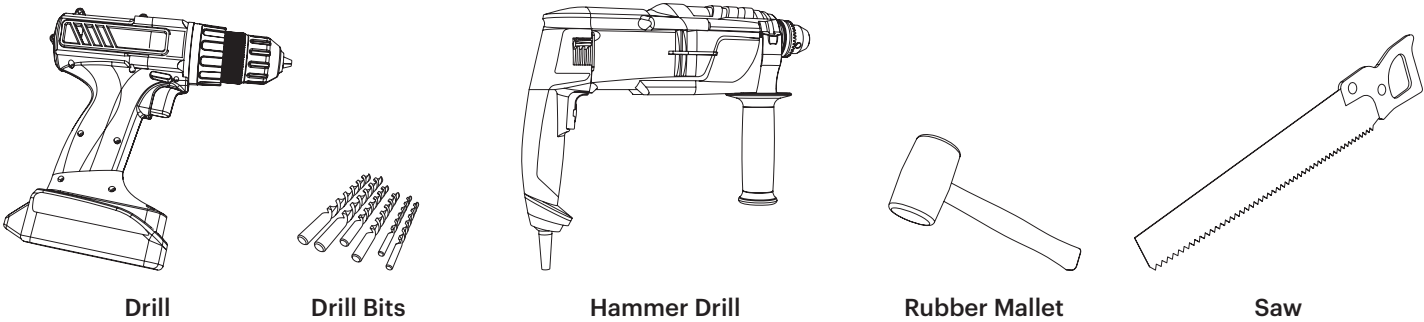

1 Drill Pilot Holes (×24)

- a** Baseplate templates (3-15-2160) and a corner template (3-15-2182) and will be provided. The templates have hole locations for drilling. Spacers will also be provided, unique to this configuration.

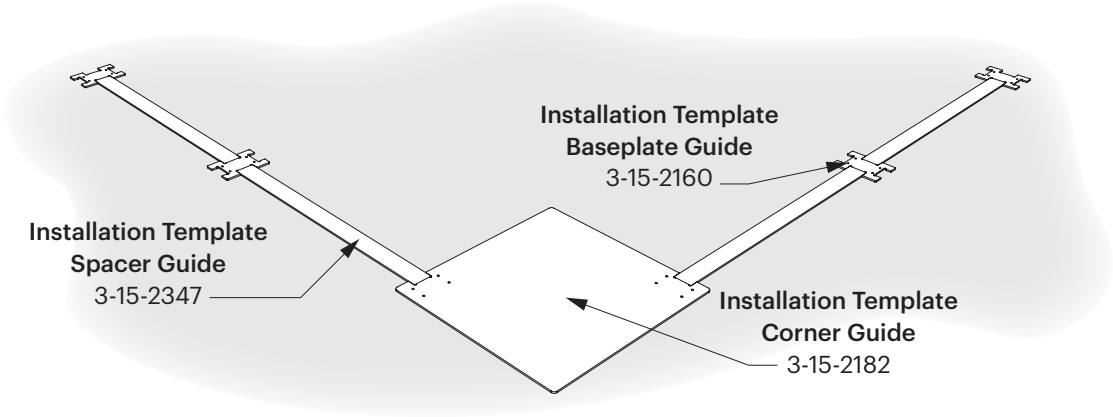

- b** Following the Installation Template, drill pilot holes. Use appropriate pilot hole diameter and depth for the type of substrate you are fastening to.


**3form stocks the drill bits required for the concrete and wood pilot holes. If you wish to purchase a drill bit, please contact your 3form sales representative.*

Substrate	Ø	Drill Bit	Depth	Anchors
Concrete	8mm	3-15-2350	min 4.3"	3-15-2309
Wood	3/16"	3-15-2335	min 3.5"	3-15-2310


Installation

2 Assemble Vertical Posts


- a** Cut Glazing Channel
(3-15-2009) to
5' 10" lengths. (×10)

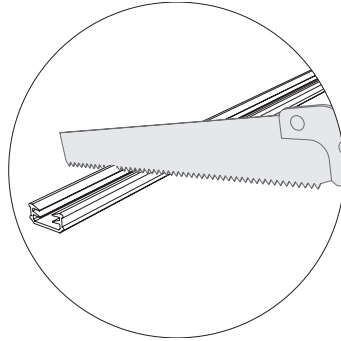

- b** Assemble Vertical Posts (0-15-2182). (×2)

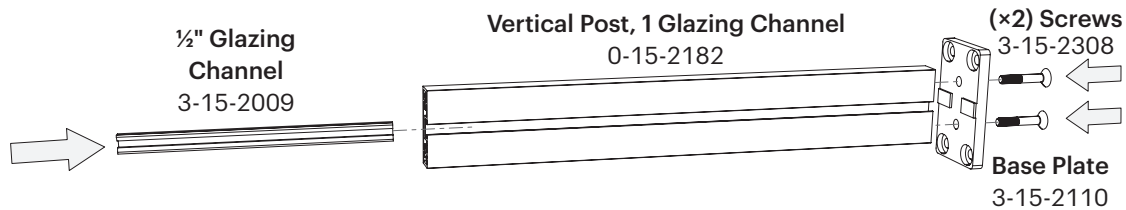


Assemble Vertical Post (0-15-2181). (×4)

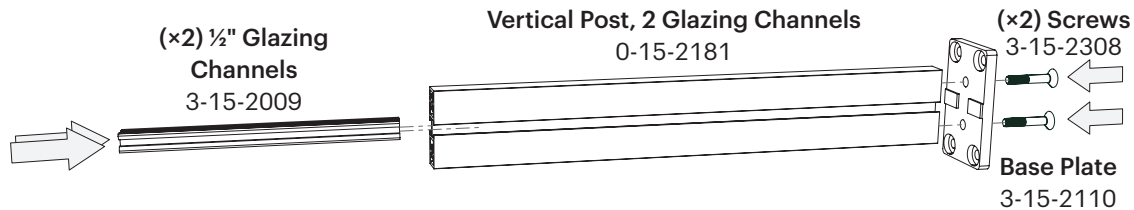


Installation

3 Secure First Vertical Post to Floor

Use hammer drill to secure post.

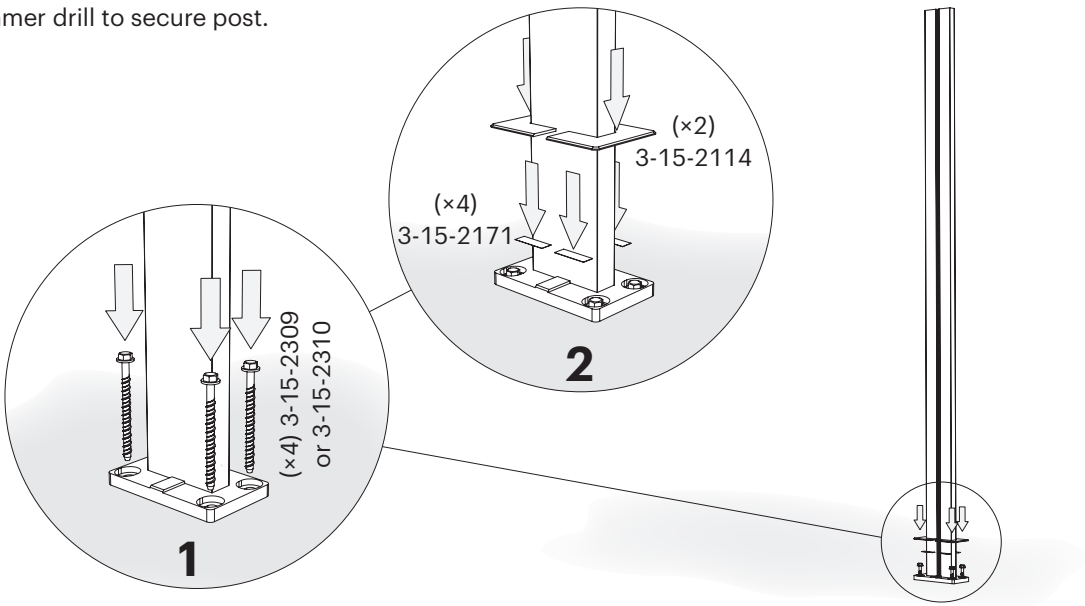


4 Install First Varia Panel

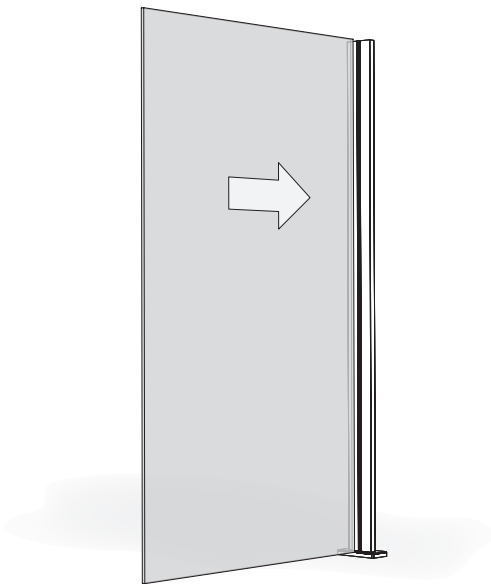


Installation

5 Install Second Vertical Post

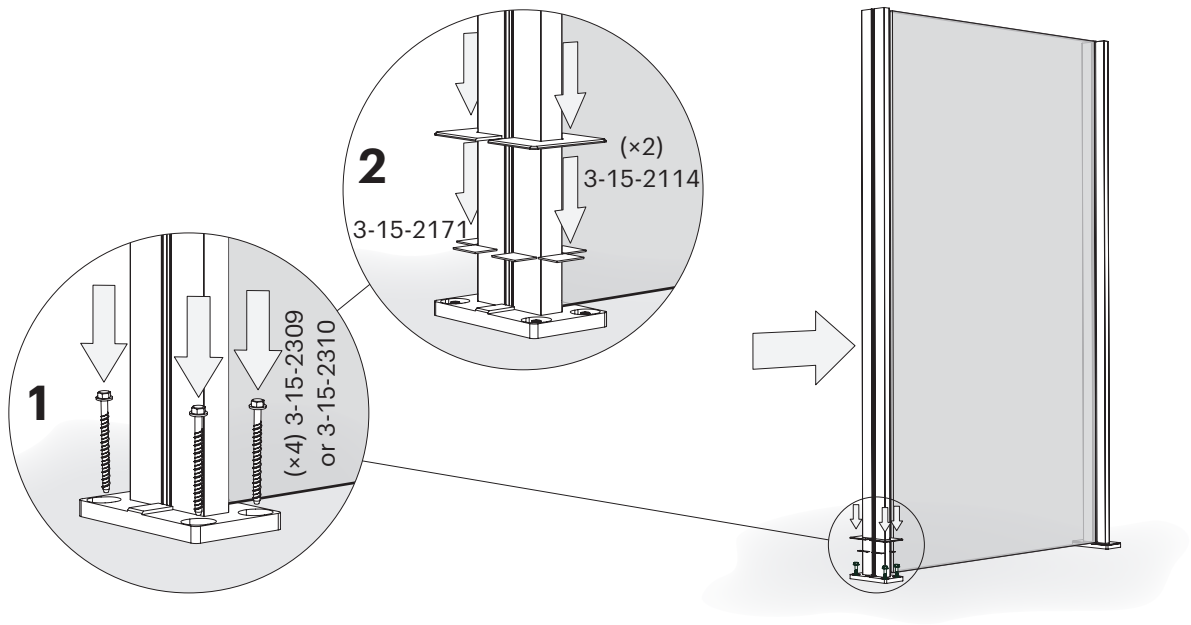



6 Install Remaining Posts and Panels

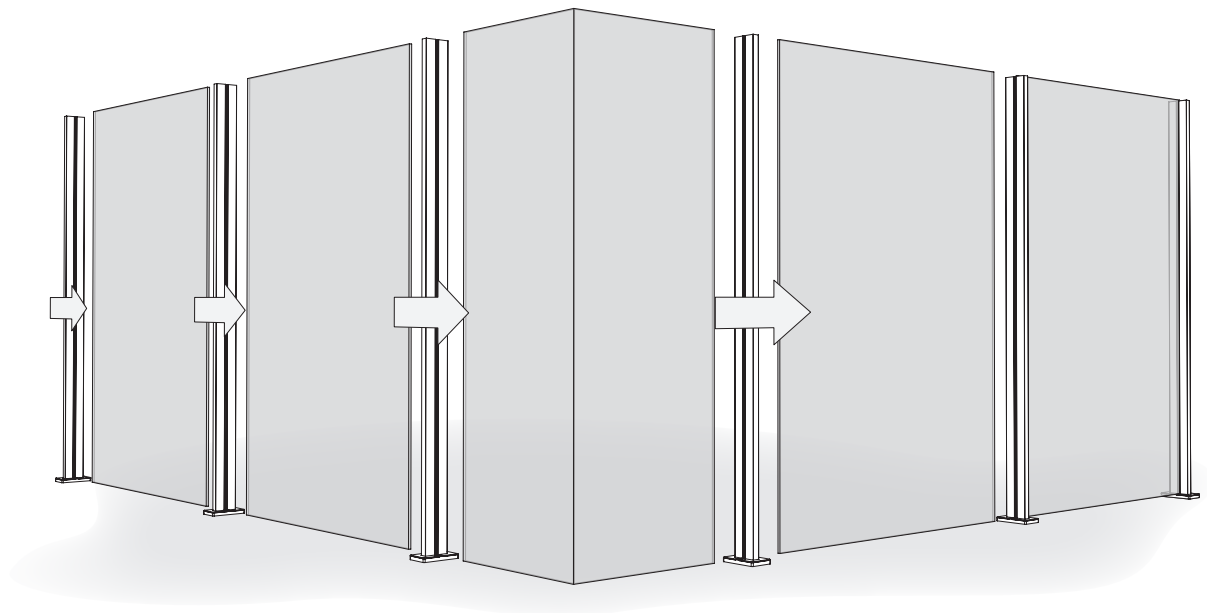



Installation

7 Assemble Top Rail

- a** Cut Glazing Channel (0-15-2369) to the length of the Top Rail (0-15-2103).

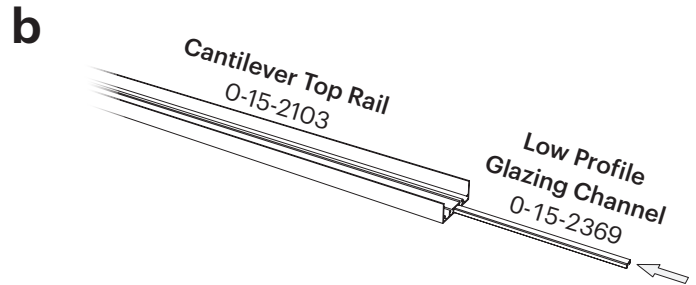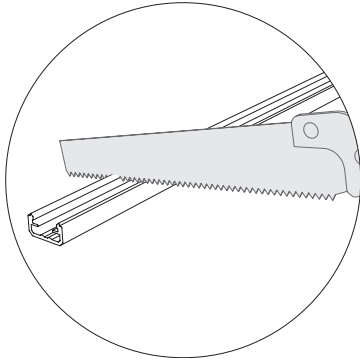


- c** Assemble Cantilevered Top Rail Mitered Corner KIT (3-15-2176-K) as shown below.

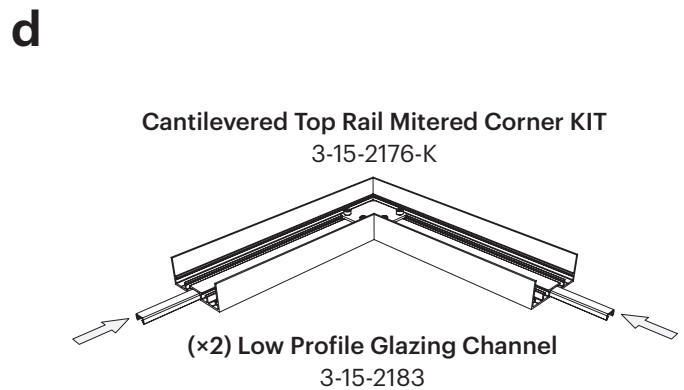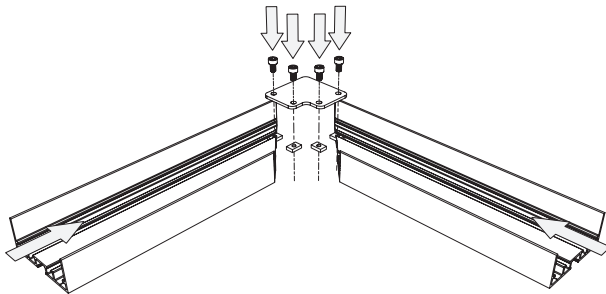

Installation

8 Connect Top Rail to Vertical Posts

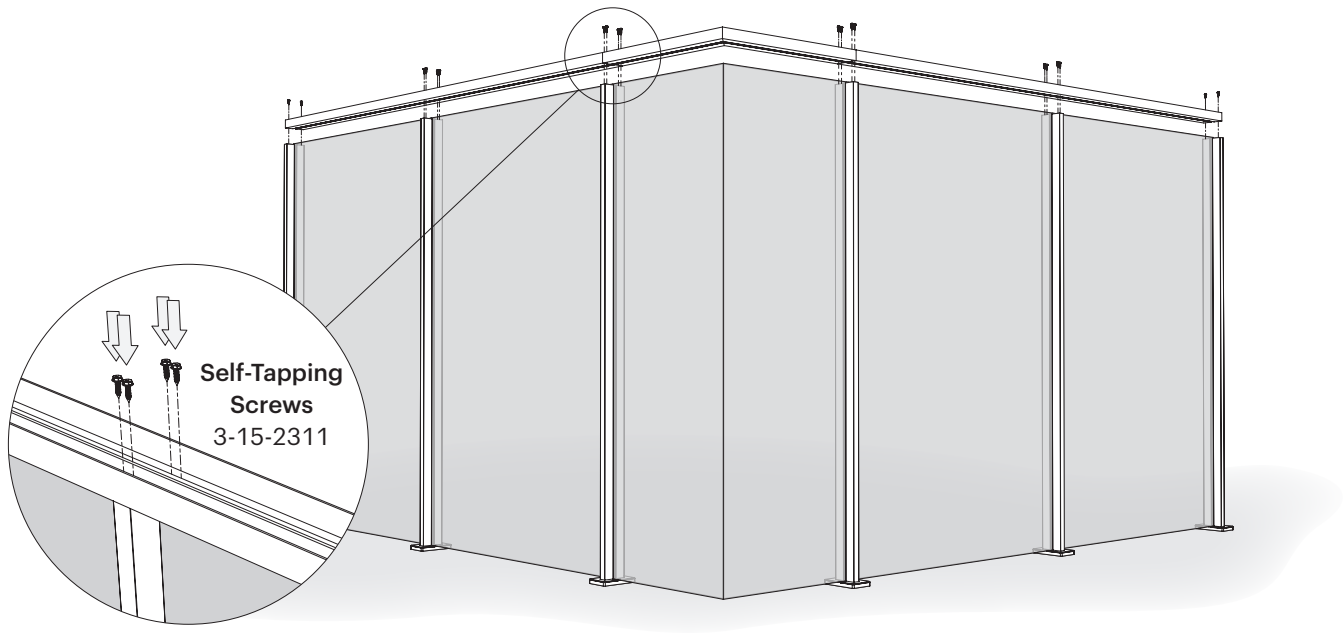

9 Attach End Caps (×2)

